



Installation Guideline

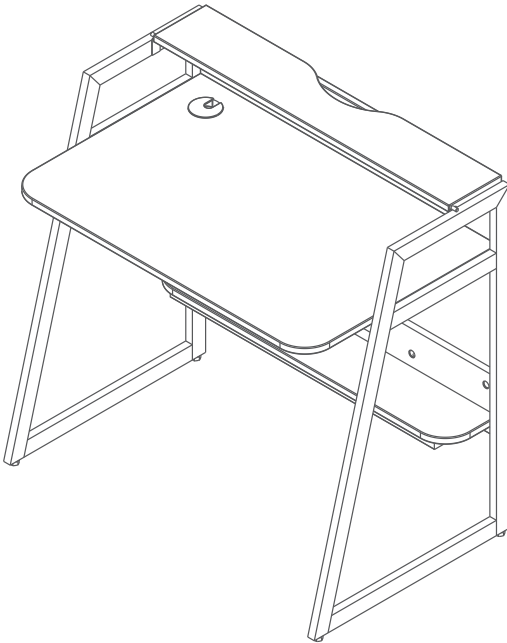


Stava


Components

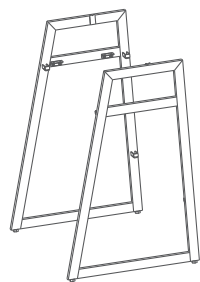


Leg

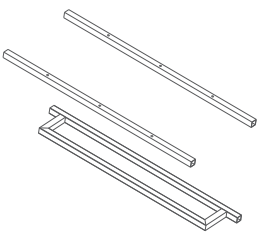


Cross Member

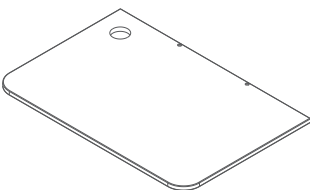

Work Top

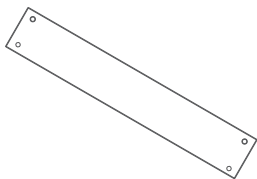


Fixed front wall

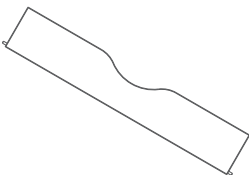


Free Shelf




Wire Manager

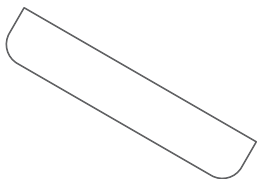

CPU Shelf

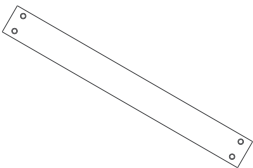

CPU Shelf front wall

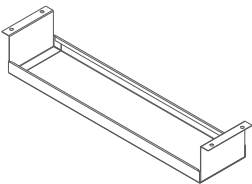


Wire Manager Tray

Tools Required


- Allen Key (available in fastener set)
- Philips screw-driver

Easy 6 Step Assembly

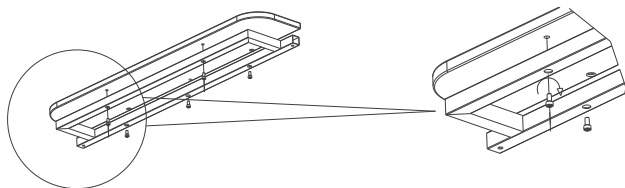


STEP 1

Fix CPU shelf on shelf support.
(Allen bolt by using Allen key)

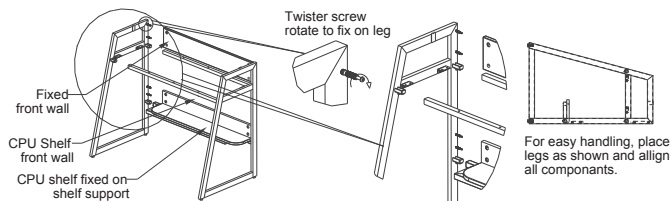


STEP 2

Fix twister screw on both legs, Align leg, cross members, Fixed front wall and CPU shelf (keep both legs vertical and guide cross members, fixed front wall and CPU shelf in leg brackets)

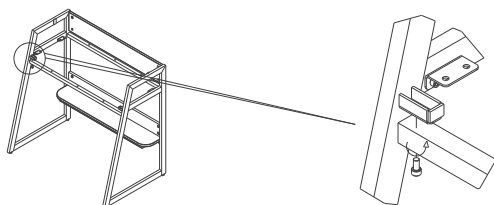


STEP 3

Leg to leg assembly with cross members
(Allen boltby using Allen key)

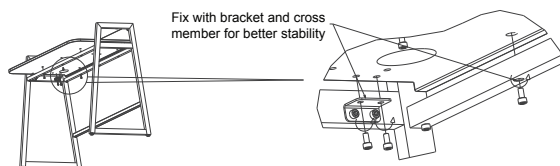


STEP 4

Under structure to work top assembly, put work top on structure and align with bracket holes.
(Allen boltby using Allen key)

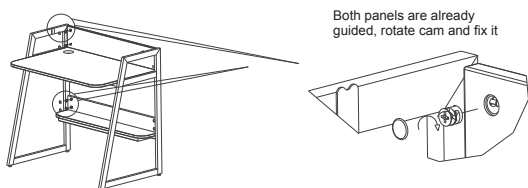


STEP 5

Fixed front wall to CPU Shelf front wall fixing with under structure
(Rastex & twister by using screw-driver)

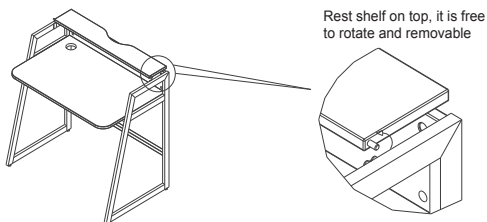

STEP 6

Free shelf - Place on top, guide bracket is provided on leg, free to rotate and removable.
Wire Manager
(Push in work top hole)

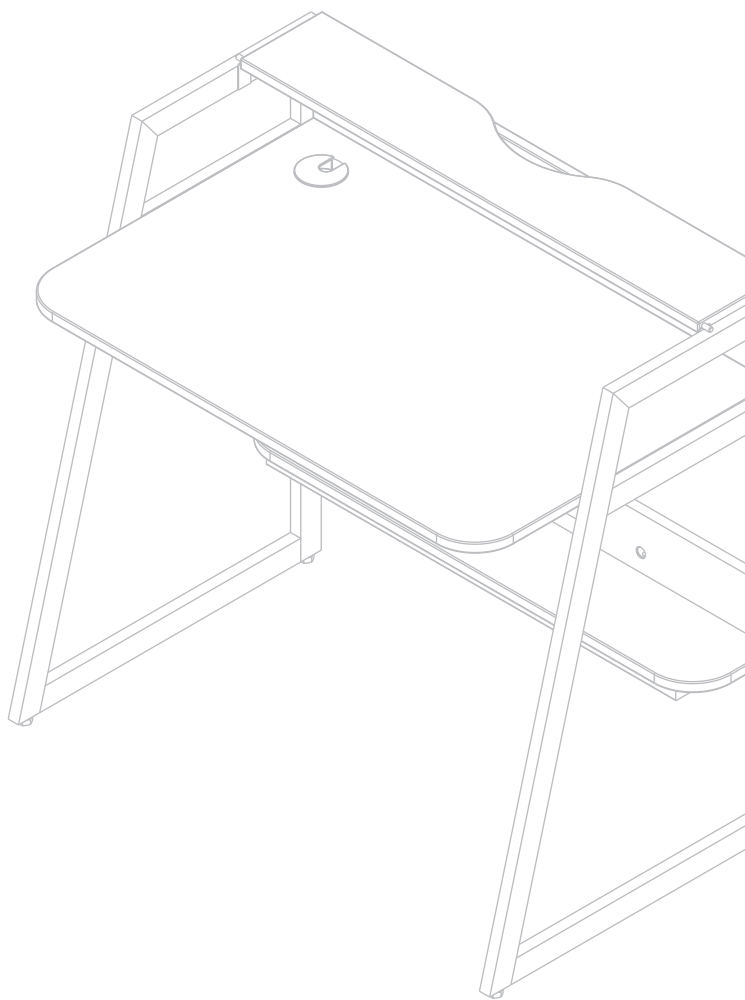

E-mail us at: response@hni-india.com

Find us at: **www.estore.hni-india.com**